

MODEL: 50307SLCOP
ASSEMBLY INSTRUCTIONS
READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS FOUNTAIN SHOULD TAKE APPROXIMATELY 5 MINUTES TO ASSEMBLE.


MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

UNPACK THE FOUNTAIN


YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS: FOUNTAIN BODY, RESERVOIR, A BAG OF RIVER STONES, SUBMERSIBLE PUMP AND TRANSFORMER.

FOUNTAIN ASSEMBLY

 1. ATTACH PUMP TO RUBBER HOSE.

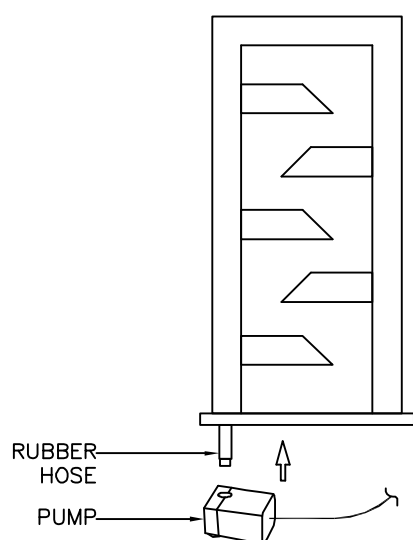

 2. PLACE PUMP FLAT IN RESERVOIR AND PLACE THE FOUNTAIN BODY ONTO RESERVOIR.

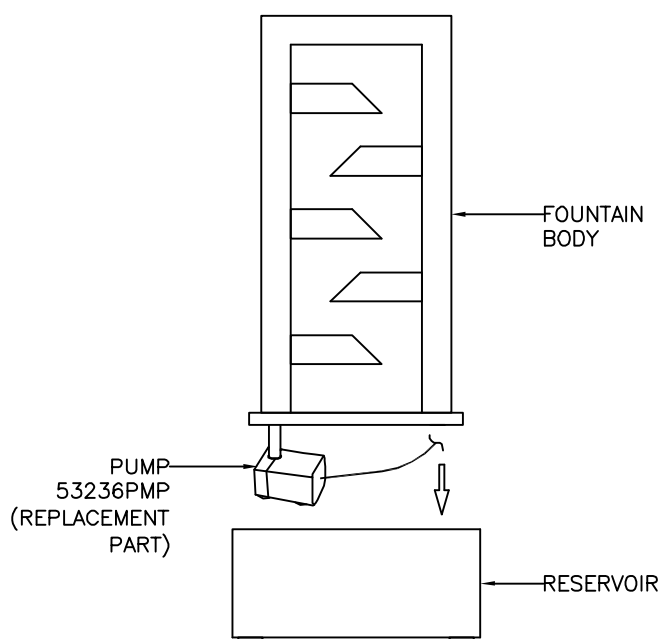

3. USE A WATER BOTTLE TO FILL RESERVOIR WITH 0.45 GALLONS OF WATER TO COMPLETELY SUBMERSE PUMP.

(DISTILLED WATER IS RECOMMENDED TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD-UP.)

 
4. TEST WATER RUNNING, ADJUST THE WATER VALVE ON PUMP IF NEEDED.

NOTE: HOLD THE TOP PORTION OF THE FOUNTAIN WHEN TESTING WATER.

5. PLACE DECORATIVE STONES ONTO RESERVOIR.

6. JOIN THE CONNECTORS TOGETHER, THEN PLUG TRANSFORMER INTO SOCKET AND TURN ON AT SWITCH, YOUR FOUNTAIN IS READY FOR USE.

AVAILABLE PARTS ARE:
50004TRANS (TRANSFORMER)
53236PMP (PUMP)

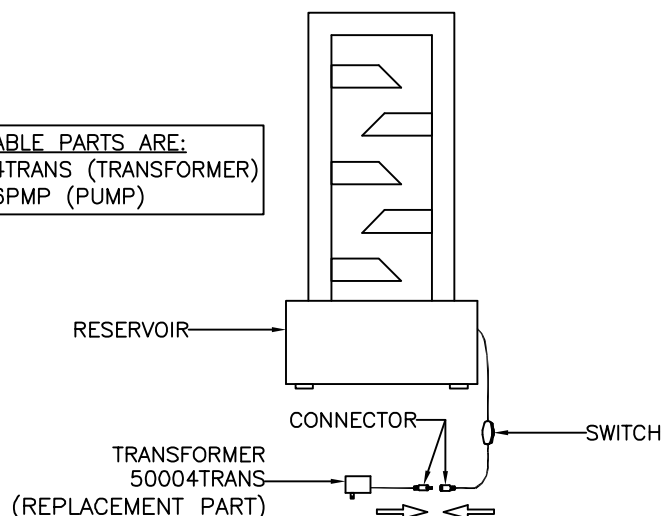

TROUBLE SHOOTING

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK PLUG AT THE SOCKET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.
2. NEXT CHECK TO MAKE SURE THE OUTLET IS POWERED.
3. IF THE FOUNTAIN STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

SPLASHING DISCLAIMER

SPLASHING MAY OCCUR WHEN FOUNTAIN IS INITIALLY TURNED ON. PROTECT SURROUNDING SURFACES AS NEEDED.

IMPORTANT PUMP INFORMATION

PUMP MUST BE FULLY SUBMERSED IN WATER WHILE OPERATING.

WATER

TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD UP, THE USE OF DISTILLED WATER IS RECOMMENDED.

WARNING

- * THIS FOUNTAIN IS RATED FOR INDOOR USE ONLY.
- ** MADE FROM GENUINE RAW COPPER, THIS FOUNTAIN WILL NATURALLY AGE OVER TIME TO CREATE A UNIQUE LOOK AND FEEL.
- *** ONCE A WEEK INSPECT FOUNTAIN, FLOOR AND ADJACENT WALL FOR MOISTURE BUILD-UP AND CLEAN AS NECESSARY. THIS IS ESPECIALLY IMPORTANT FOR HUMID ENVIRONMENTS.
- **** THIS UNIT MUST BE CONNECTED TO A SUPPLY CIRCUIT THAT IS PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI). THE GFCI SHOULD BE TESTED ON A ROUTINE BASIS. TO TEST THE GFCI, PUSH THE TEST BUTTON. THE GFCI SHOULD INTERRUPT POWER. PUSH THE RESET BUTTON. POWER SHOULD BE RESTORED. IF THE GFCI FAILS TO OPERATE IN THIS MANNER, THE GFCI IS DEFECTIVE.